


# SUPCO S-1850E

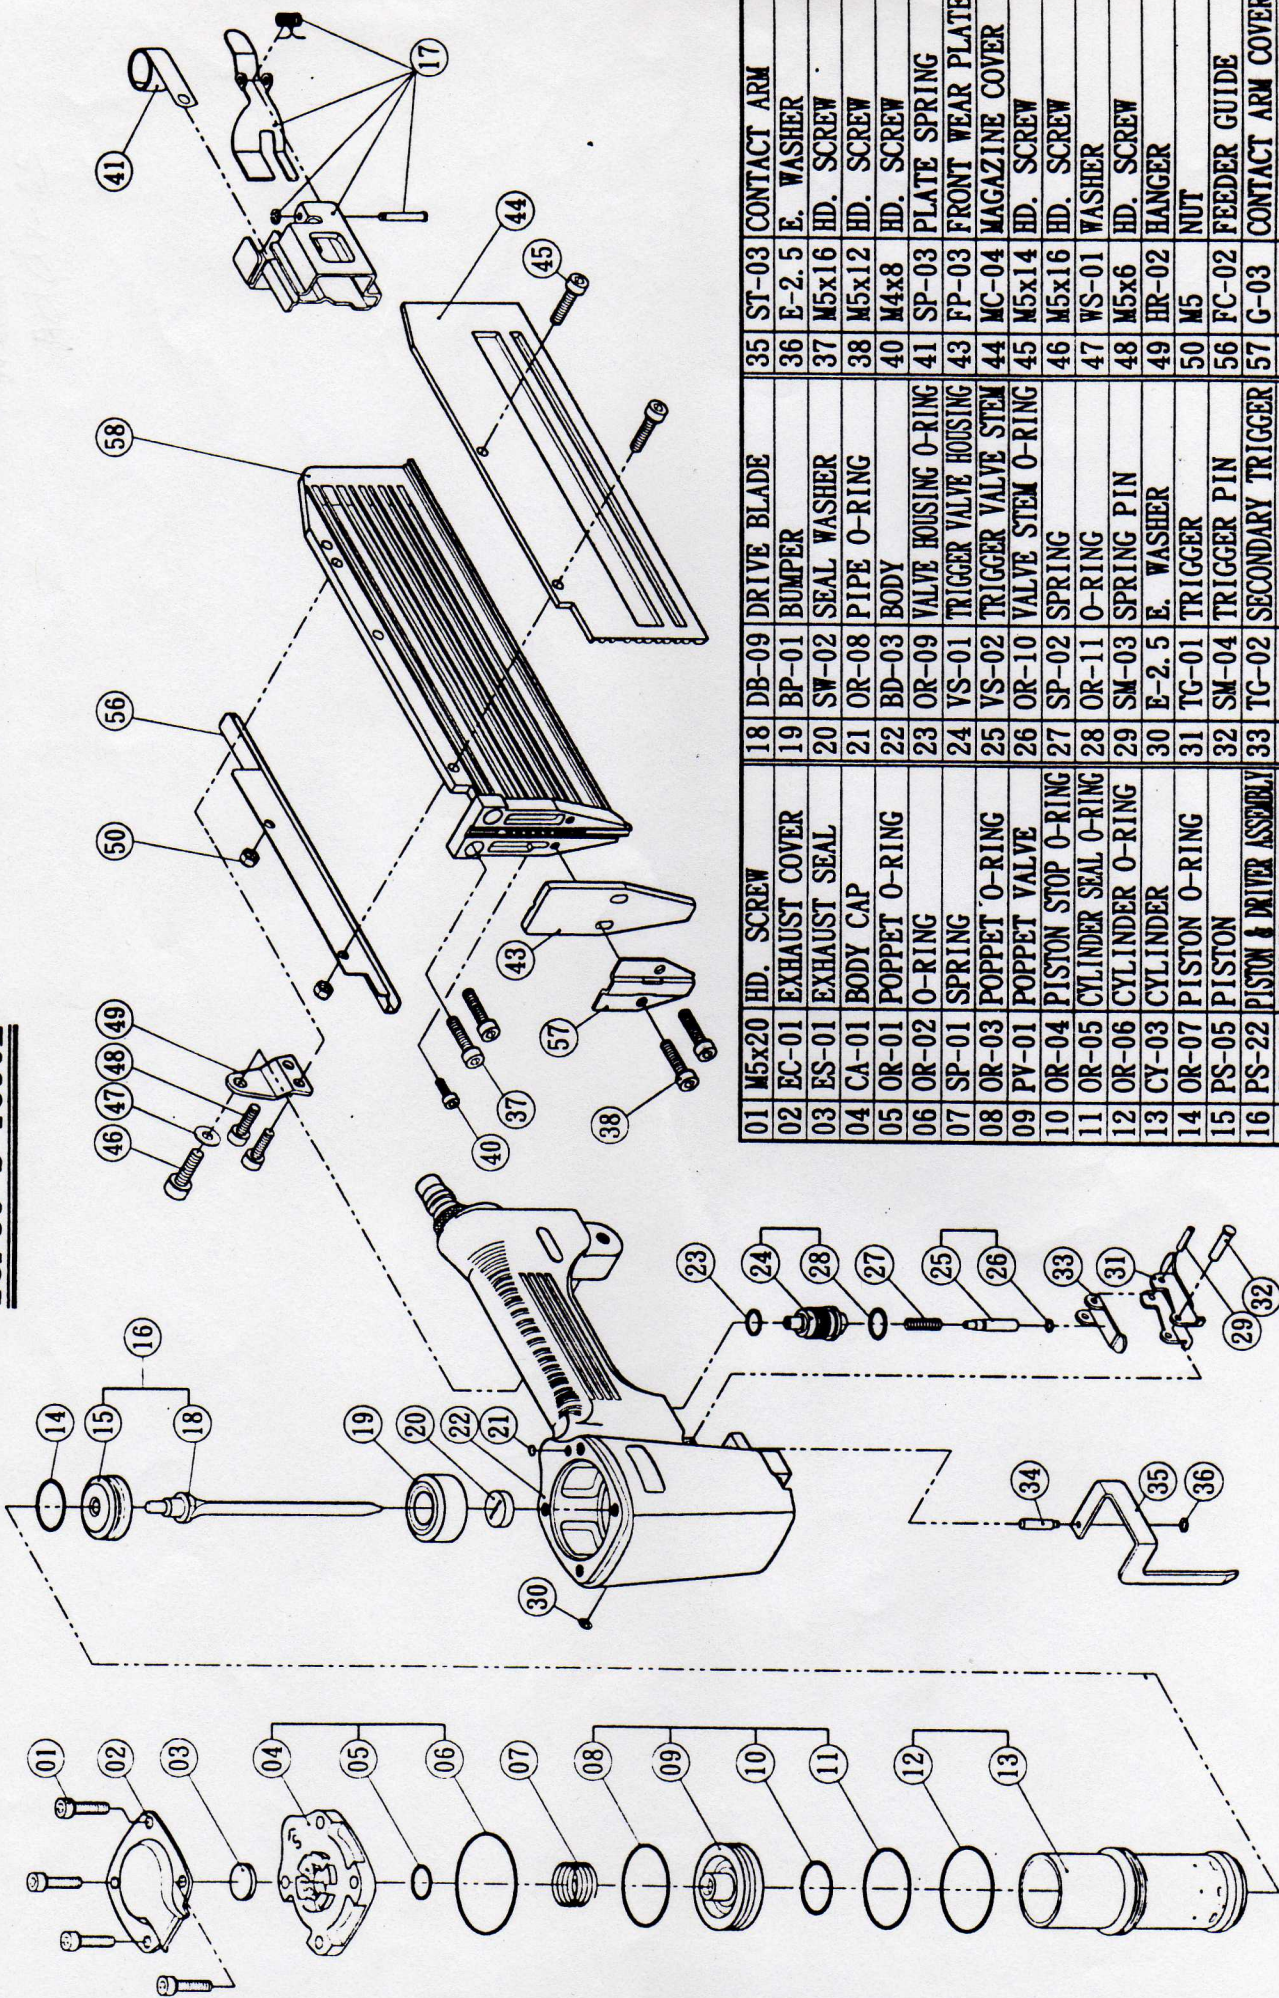

01	M5x20	HD. SCREW	18	DB-09	DRIVE BLADE	35	ST-03	CONTACT ARM
02	EC-01	EXHAUST COVER	19	BP-01	BUMPER	36	E-2.5	E. WASHER
03	ES-01	EXHAUST SEAL	20	SW-02	SEAL WASHER	37	M5x16	HD. SCREW
04	CA-01	BODY CAP	21	OR-08	PIPE O-RING	38	M5x12	HD. SCREW
05	OR-01	POPPET O-RING	22	BD-03	BODY	40	M4x8	HD. SCREW
06	OR-02	O-RING	23	OR-09	VALVE HOUSING O-RING	41	SP-03	PLATE SPRING
07	SP-01	SPRING	24	VS-01	TRIGGER VALVE HOUSING	43	FP-03	FRONT WEAR PLATE
08	OR-03	POPPET O-RING	25	VS-02	TRIGGER VALVE STEM	44	MC-04	MAGAZINE COVER
09	PV-01	POPPET VALVE	26	OR-10	VALVE STEM O-RING	45	M5x14	HD. SCREW
10	OR-04	PISTON STOP O-RING	27	SP-02	SPRING	46	M5x16	HD. SCREW
11	OR-05	CYLINDER SEAL O-RING	28	OR-11	O-RING	47	WS-01	WASHER
12	OR-06	CYLINDER O-RING	29	SM-03	SPRING PIN	48	M5x6	HD. SCREW
13	CY-03	CYLINDER	30	E-2.5	E. WASHER	49	HR-02	HANGER
14	OR-07	PISTON O-RING	31	TG-01	TRIGGER	50	M5	NUT
15	PS-05	PISTON	32	SM-04	TRIGGER PIN	56	FC-02	FEEDER GUIDE
16	PS-22	PISTON & DRIVER ASSEMBLY	33	TG-02	SECONDARY TRIGGER	57	G-03	CONTACT ARM COVER
17	FD-06	FEEDER ASSEMBLY	34	SM-05	CONTACT PIN	58	MZ-15	MAGAZINE ASSEMBLY