


SUPCO S-K9040



01	M5x20	HD. SCREW	22	BD-05	BODY	43	FP-05	FRONT WEAR PLATE
02	EC-01	EXHAUST COVER	23	OR-09	VALVE HOUSING O-RING	44	FC-05	MAGAZINE COVER
03	ES-01	EXHAUST SEAL	24	VS-01	TRIGGER VALVE HOUSING	45	BH5x14	BH. SCREW
04	CA-01	BODY CAP	25	VS-03	TRIGGER VALVE STEM	46	M5x16	HD. SCREW
05	OR-01	POPPELT O-RING	26	OR-10	VALVE STEM O-RING	47	M5	NUT
06	OR-02	O-RING	27	SP-02	SPRING	48	HR-03	HANGER
07	SP-01	SPRING	28	OR-11	O-RING	49	FD-11	FEEDER
08	OR-03	POPPELT O-RING	29	SP-07	SPRING RETAINER	50	G-03	CONTACT ARM GUIDE
09	PV-01	POPPELT VALVE	30	E-2.5	E. WASHER	51	M4x16	HD. SCREW
10	OR-04	PISTON STOP O-RING	31	TG-01	TRIGGER	52	M4	NUT
11	OR-05	CYLINDER SEAL O-RING	32	SM-04	TRIGGER PIN	53	SM-03	SPRING PIN
12	OR-12	CYLINDER O-RING	33	TG-02	SECONDARY TRIGGER	54	WS-03	SPACER
13	CY-04	CYLINDER	34	SM-09	CONTACT PIN	55	BH5x20	BH. SCREW
14	OR-13	PISTON O-RING	35	ST-04	CONTACT ARM	56	M5	NUT
15	PS-03	PISTON	36	E-2.5	E. WASHER	57	SM-10	SPRING PIN
16	SM-01	SPRING PIN	37	M5x16	HD. SCREW	58	M5x20	HD. SCREW
17	SM-02	STEM	38	M5x12	HD. SCREW	59	WS-01	WASHER
18	DB-04	DRIVE BLADE	39	P-03	DRIVER GUIDE	60	SP-12	CONTACT ARM SPRING
19	BP-02	BUMPER	40	M4x6	HD. SCREW	61	WS-01	WASHER
20	SW-02	SEAL WASHER	41	SP-06	PLATE SPRING	62	PS-28	PISTON & DRIVER ASSEMBLY
21	OR-08	PIPE O-RING	42	MZ-07	MAGAZINE			

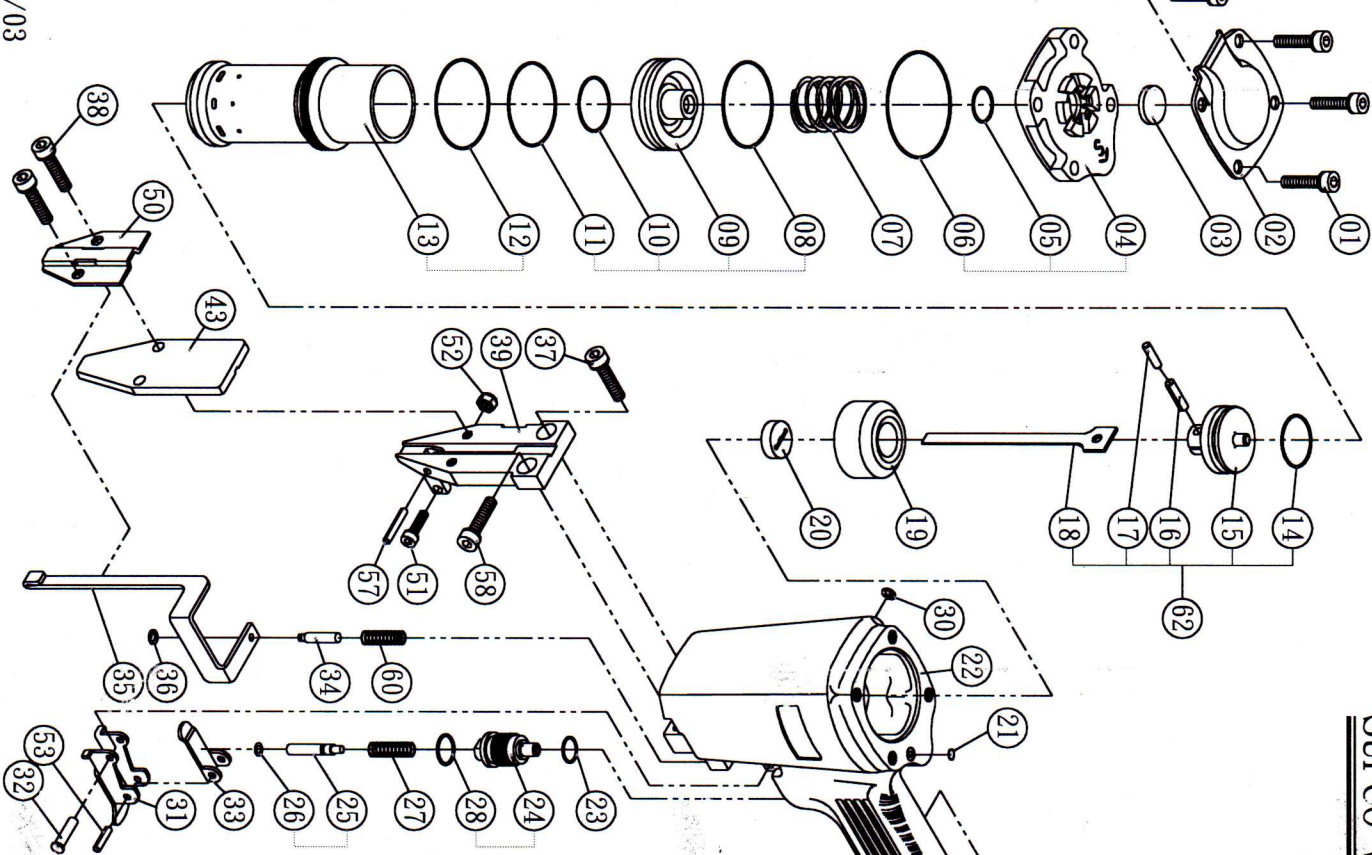