


SUPCO S-TN8

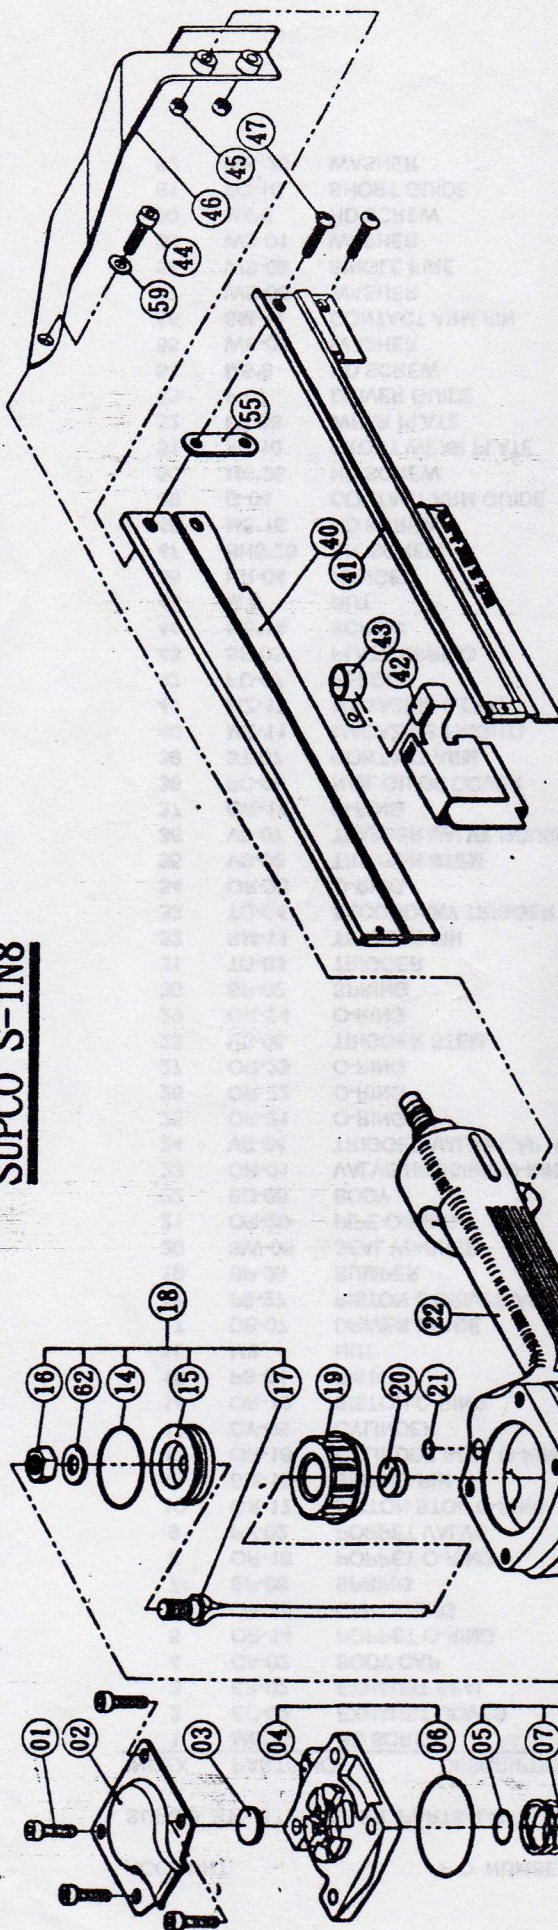

01	M6x25	SCREW	23	OR-01	VALVE HOUSING O-RING	45	M5	UNT
02	EC-02	EXHAUST COVER	24	VS-04	TRIGGER VALVE HOUSING	46	HR-04	HANGER
03	ES-02	EXHAUST SEAL	25	OR-21	O-RING	47	BH5x20	SCREW
04	CA-02	BODY CAP	26	OR-22	O-RING	48	M5x16	SCREW
05	OR-14	POPPET O-RING	27	OR-23	O-RING	49	G-04	CONTACT ARM GUIDE
06	OR-15	O-RING	28	VS-05	PILOT VALVE	50	M6x25	SCREW
07	SP-08	SPRING	29	OR-24	O-RING	51	FP-10	FRONT WEAR PLATE
08	OR-16	POPPET O-RING	30	SP-02	SPRING	52	FP-06	WEAR PLATE
09	PV-02	POPPET VALVE	31	TG-03	TRIGGER	53	P-07	DRIVER GUIDE
10	OR-17	PISTON STOP O-RING	32	SM-11	TRIGGER PIN	54	M5x8	SCREW
11	SM-10	SPRING PIN	33	TG-04	SECONDARY TRIGGER	55	WS-08	WASHER
12	OR-18	CYLINDER O-RING	34	OR-25	O-RING	56	SM-11	CONTACT ARM PIN
13	CY-05	CYLINDER	35	VS-06	TRIGGER STEM	57	WS-05	WASHER
14	OR-19	PISTON O-RING	36	VS-07	TRIGGER VALVE HOUSING	58	WS-09	SINGLE FIRE
15	PS-04	PISTON	37	OR-14	O-RING	59	WS-01	WASHER
16	M8	NUT	38	FC-07	NAIL GUIDE COVER	60	M4x8	SCREW
17	DB-07	DRIVER BLADE	39	ST-07	CONTACT ARM	61	FC-10	SHORT GUIDE
18	PS-27	PISTON & DRIVER ASSEMBLY	40	MZ-11	MADAZINE <RIGHT>	62	WS-20	WASHER
19	BP-03	BUMPER	41	MZ-12	MADAZINE <LEFT>	63		
20	SW-05	SEAL WASHER	42	FD-07	FEEDER	64		
21	OR-20	PIPE O-RING	43	SP-03	PLATE SPRING	65		
22	BD-08	BODY	44	M5x14	SCREW	66		

OKK